

Quick guide

rev.0 01/2019

Patient chair control

Control panel				
Backerest down As long as pressed (manual)	the second se	Backerest up As long as pressed (manual)	1	Ref C
Chair down As long as pressed (manual)	₽	Chair up As long as pressed (manual)		<u>_</u>
Chair to autoposition (automatic)	N N	Chair rinsing/last position (automatic)		\bigcirc
Memory 1 (automatic)	Memory 2 (automatic)		Memory 3 (automatic)	ALL A
Locking Chair Movements		Press the key for approx. 3 seconds until a beep is heard to disable the dental chair		
Chair Swivelling (ONLY FOR TOP VERSION)		To unlock the dental chair swiveling movement, press the key and turn the chair in the desired direction (clockwise or anticlockwise).		

Foot Control		
Backerest down As long as pressed (manual)	Backerest up As long as pressed (manual)	Ċ
Chair down As long as pressed (manual)	Chair up As long as pressed (manual)	Ì

Chair Platform (ONLY FOR CARVING VERSION)					
Recall the memory that was previously activated (automatic)	B C C C C C C C C C C C C C C C C C C C	Chair to autoposition (automatic)	A		
Chair rinsing/last position (automatic)					



O.M.S. spa - Officine Meccaniche Specializzate

Via Dante, 20/A - 35030 Selvazzano Dentro (PD) ITALIA Tel. +39 049 8976455 - Fax +39 049 8975566 - www.omsstaff.com - info@omsstaff.com - PEC omsstaff@legalmail.it C.F. e.P. IVA 00228440285 TVA/VAT IT 00228440285 CCIAA PD 87089 Mecc. PD 000016 - Tribunale 4911 (Vol.Doc. 9278) - Cap. Soc. € 702.000 int. ver. Iscrizione al Registro A.E.E. Ni: IT0802000000899



Dental unit control

Control panel		
Operating lamp		
Cup Fill	(Short activation)	
Bowl rinse	(Short activation)	Ľ, 🎽
Door open / assistant call function		
Time /date settings		

Foot Control

Function can be programmed

Instrument control

Control panel					
User profile	_		 L		ОК
	L				UK
	press until "CURR	ENT USER No." ap	pears Adjus	t value	Accept new value
Spray Clean Spray		Chip Blower Press level A		Fiber optic light	-Ö-
Increase/decrease transmission ratio,	parameter (power torque, etc.)	, rpm,		Confirm parameter	ΟΚ
<u>Turbine</u>					
Speed or fixed / progressive power control					
Scaler (Enabling the SCALER, PERIO AND ENDO functions depends on the installed scaler model.)					
Scaler function		Perio function		Endo function	



Instrument control

Control pane	l				
Micromotor					
Memory 1		Memory 2		Memory 3	
Speed or fixed / progressive power control	(0)				
Micromotor Bru	<u>ushless</u>	ſ	~		•
Memory 1		Memory 2		Memory 3	
Speed or fixed / progressive power control	(0)	(*)Fast mode	FAST	(*)Auto Reverse mode	AUTO REVERSE
(*)Auto Forward mode	AUTO	(*)Transmission Ratio	RATIO	(*)Maximum Torque	TORQUE
	FORWARD		1X		
Reversing Rotation Direction Move the foot control lever A to the left and press it downwards until a beep is heard.					
Reversing Rotation Direction					
move the central lever A to the left until a beep is heard.					
(*) Only for enabled					

(*) Only for enabled brushless micromotor



Programming

