

Quick guide rev.0 01/2019

# Patient chair control

Control panel							
Backerest down As long as pressed (manual)		Backerest u As long as p (manual)	•				
Chair down As long as pressed (manual)	4	Chair up As long as p (manual)	ressed	<u> </u>			
Chair to autoposition (automatic)	position		g/last position				
Memory 1 (automatic)	Memory 2 (autom	.00	Memory 3 (automatic)				

Foot Control		
Backerest down As long as pressed (manual)	Backerest up As long as pressed (manual)	Ö
Chair down As long as pressed (manual)	Chair up As long as pressed (manual)	Ø






## Dental unit control

Control panel		
Operating lamp		0000000
Cup Fill	(Short activation)	
Bowl rinse	(Short activation)	L #
Time /date settings		

#### **Foot Control**

Function can be programmed

### Instrument control

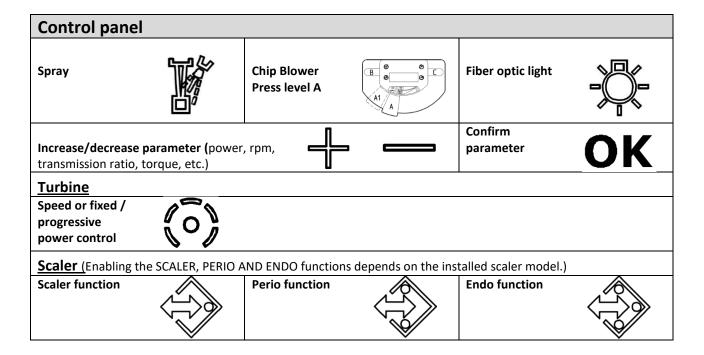



## Instrument control

Control pane	Control panel							
Micromotor								
Memory 1		Memory 2		Memory 3				
Speed or fixed / progressive power control	(0)							
Micromotor Br	<u>ushless</u>	<del>,</del>		<del></del>				
Memory 1		Memory 2		Memory 3				
Speed or fixed / progressive power control	(0)	(*)Fast mode	FAST	(*)Auto Reverse mode	AUTO REVERSE			
(*)Auto Forward mode	AUTO FORWARD	(*)Transmission Ratio	RATIO 1X	(*)Maximum Torque	TORQUE			
Reverse Rotation  Move the foot control lever A to the left and press it downwards until a beep is heard.								
Reverse Rotation move the central lever A to the left until a beep is heard.								

(\*) Only for enabled brushless micromotor



### **Programming**

#### **Control panel** Patient chair settings Memory 1-2-3 To save a dental chair position, move the chair to the (automatic) required position and hold down the key until you hear the beep that indicates the position has been saved. Chair to To save a dental chair position, move the chair to the autoposition required position and hold down the key until you hear (automatic) the beep that indicates the position has been saved. **Chair rinsing** To save a dental chair position, move the chair to the required position and hold down the key until you hear (automatic) the beep that indicates that the position has been saved. **Instrument settings Fiber Optic Spray** Light Adjust value Accept new value Cup filling and spitton rinsing time **Cup Fill Spittoon Rising** Press for 3 seconds and release the Press for 3 seconds and release the button when the desired rinsing time button when the desired level is has elapsed. reached in the cup. **Micromotor settings Memory 1-2-3** Select programs Adjust value Press for few seconds (beep) **Clock and data settings** Clock and data

Accept new value

Adjust value